

# Seamless Systems: Weekly Maintenance Cleaning Instructions




## SUGGESTED MATERIALS:

- ★ Microfiber mop
- ★ Basic Clean
- ★ Automatic Floor Scrubber
- ★ Bleach Free Soft Scrub
- ★ Goo Gone Adhesive Remover

**NOTE:** It is important to routinely remove dirt and grit from your seamless floor! If allowed to build-up, dirt, grit and grime will dull the look of the floor and make long-term maintenance more difficult, as well as affect the performance of the floor. It is recommended that you follow these instructions on a weekly basis. However, if floor is under used, you may follow these instructions bi-monthly (twice per month).

## WEEKLY CLEANING PROCEDURES:

**STEP ONE:** Sweep entire floor with a clean, untreated microfiber mop to remove dirt and grit.

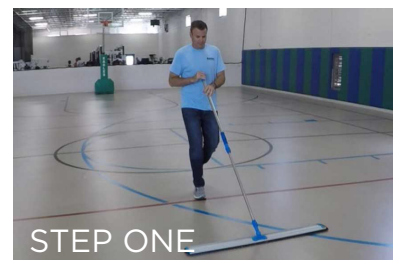

**STEP TWO:** Mix Basic Clean with hot tap water (approximately 120°-130° using a 200 to 1 water-to-cleaner ratio and pour into the automatic scrubber per the equipment manufacturers instructions. If the floor is extremely dirty, a 30 to 1 ratio for the hot tap water and Basic Clean can be used.



**STEP THREE:** Check your auto scrubber to make sure a 3M 5300 Blue Pad (medium grit) is in place. If not, replace the pad before proceeding. Turn on the automatic scrubber and apply the Basic Clean/water solution to the entire floor with the automatic floor scrubber by turning the vacuum OFF and the squeegee in the up position. Allow solution to stand on floor for 10 minutes to release and loosen dirt, but do not allow cleaner solution to dry.



**STEP FOUR:** After allowing the solution to stand on the floor to loosen dirt, use the automatic scrubber on the wet areas of the floor with the vacuum ON and the squeegee in the down position, again using a BLUE scrub pad. If puddled areas occur on the floor, go back over the area with the automatic scrubber to ensure all wet areas have been vacuumed. Once complete, a "wet floor" sign should be placed on floor. Allow the floor to dry overnight.

